

Acer LCD Monitor Quick Start Guide (QSG)

Important safety instructions

Please read the following instructions carefully.


- To clean the LCD monitor screen: Be sure that your monitor is electrically rated to operate with the AC power available in your location.
 - Turn off the LCD monitor and unplug the power cord.
 - Spray a non-solvent cleaning solution onto a rag and clean the screen gently.
- Do not place the LCD monitor near a window. Exposing the monitor to rain, moisture or sunlight can severely damage it.
- Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
- Do not remove the cover or attempt to service this unit yourself. An authorized technician should perform servicing of any nature.
- Store the LCD monitor in a room with a temperature of -20° to 60° C (-4° to 140° F). Storing the LCD monitor outside this range may result in permanent damage.
- Immediately unplug your monitor and call an authorized technician if any of the following circumstances occur:
 - Monitor-to-PC signal cable is frayed or damaged.
 - Liquid spills onto the LCD monitor or the monitor is exposed to rain.
 - The LCD monitor or case is damaged.

Attaching the monitor to the base


- Remove the monitor base from the packaging and place it on a stable and level workspace.
- Remove the monitor from the packaging.
- Attach the monitor stand arm to the base.
 - Ensure that the base is locked onto the monitor stand arm. (for selected models)
 - Secure the base to the monitor stand arm by turning the white screw using the integrated tab or a suitable coin. (for selected models)

Connecting Your Monitor to a Computer

- Turn off your monitor and unplug your computer's power cord.
- 2-1 Connect Video Cable
 - Make sure both the monitor and computer are powered-OFF.
 - Connect the VGA video cable to the computer.
- 2-2 Connect Digital Cable (Only Dual-input model)
 - Make sure both the monitor and computer are powered-OFF.
 - Connect one end of the 24-pin DVI cable to the back of the monitor and connect the other end to the computer's port.
- 2-3 Connect HDMI Cable (Only HDMI-input model)
 - Make sure both the monitor and computer are powered-OFF.
 - Connect the HDMI cable to the computer.
- Connect the Audio Cable. (Only Audio-Input Model) (Optional)
- Insert the monitor power cable into the power port at the back of the monitor.
- Plug the power cords of your computer and your monitor into a nearby electrical outlet.

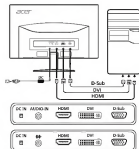

External Controls



No.	Icon	Item	Description
1, 2		Power button/indicator	Turns the monitor on/off. Blue indicates power on. Amber indicates standby/power saving mode.
3, 4		Minus / plus	If the OSD is active, press the Minus or Plus button to toggle between the OSD options.
5		OSD functions	Press to view the OSD. Press again to enter a selection in the OSD.
6		Auto adjust button / exit	If the OSD is active, press Auto to exit the OSD. Once the OSD is inactive, press Auto and the monitor will automatically optimize the display position, focus, and clock of your display.
7		Empowering key	Press the Empowering Key to open the Acer eColor Management OSD and access the scenario modes.

CONTENTS

FOR THE USER

Important Safety Information	2
Description Of The Oven	4
Getting To Know Your Oven	5
The Cooling Fan For The Controls	5
Control Panel Indicator Neons	5
Grill And Oven Furniture	6
Before Using For The First Time	7
Rating Plate	7
When First Switching On	7
Condensation And Steam	7
Cookware	7
The Electronic Timer	8
The Dual Grill	12
Using The Grill	12
Things To Note	12
The Grill Pan And Handle	13
Hints And Tips	13
Grilling Chart	14
The Second Oven	15
Using The Second Oven	15
Things To Note	15
To Fit The Second Oven Shelf	15
Hints And Tips	16
Second Oven Cooking Chart	17
The Main Fan Oven	18
Using The Fan Oven	18
Things To Note	18
To Fit The Main Oven Shelves	18
Hints And Tips	19
The Conventional Oven	20
Using The Conventional Oven	20
Things To Note	20
Hints And Tips	21
Main Oven Cooking Chart	22
Roasting Chart	23
Pizza Function	24
Using Pizza Function	24
Things To Note	24
Hints And Tips	24
Speedcook	25
Using Speedcook	25
Things To Note	25
Hints And Tips	25
Thermal Grilling	26
Using Thermal Grilling	26
Things To Note	26
Hints And Tips	27
Thermal Grilling Chart	27

Defrosting	28
Using Defrost Feature	28
Things To Note	28
Hints And Tips	28
Helpful Hints When Buying And Preparing Food	30
Care And Cleaning	31
Cleaning Materials	31
Cleaning The Outside Of The Oven	31
Cleaning Inside The Ovens	32
Cleaning The Stayclean Surfaces	32
Cleaning The Door Glass	32
Cleaning The Grill And Oven Furniture	34
Replacing An Oven Light Bulb	34
If Something Doesn't Work	35
Service and Spare Parts	37
Guarantee Conditions	38

FOR THE INSTALLER

Technical Details	39
Warnings	40
Choice Of Electrical Connection	40
Things To Note	41
Preparing Cabinet For Fitting Oven	41
Recommended Cabinet Dimensions	42
How To Finish Unpacking	43
Tools Required	43
Making The Electrical Connections	43
Preparing Cable	43
To Remove Cover Of Mains Terminal	44
Connecting To The Mains Terminal	45
Connecting To A Hob Or Cooker Point	45
Checking Electrical Connections	45
Fitting Into The Cabinet	46

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitor and do not indicate a problem.

NOTES

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- 48cm(19") TFT Color LCD Monitor
- Crisp, Clear Display for Windows
- **Recommended Resolutions: 1280 X 1024 @60Hz**
- EPA ENERGY STAR[®]
- Dual Input (DVI + Analog) (Only dual-input model)
- Ergonomic Design (TCO'03 Approved)
- Space Saving, Compact Case Design

CHECKING THE CONTENTS OF THE PACKAGE

The product package should include the following items:

1. LCD Monitor
2. Owner's Manual
3. Power Cord
4. 15-pin D-Sub Cable
5. DVI Cable (Only dual-input model)
6. Audio Cable
7. Pivot Software (Only AL1922 r)
8. Quick Start Guide

How To Use This Guide

Please read this Guide thoroughly before assembling your cleaner. Pay particular attention to the product diagram, assembly instructions, and part names.

1. Begin by locating and organizing all parts before assembly.
2. Familiarize yourself with the parts and where they go.

Little Green® Product Features

Following this User's Guide will let you get the best performance from your BISSELL Little Green for many years.

Clean/Solution Tank

The Clean/Solution Tank is the tank to your left as you face the unit looking at the black power switch.

Dirty/Collection Tank

The Dirty/Collection Tank is the tank to your right as you face the unit looking at the black power switch.

Built-In Heater Switch (Red)

The Little Green ProHeat® models give you the ability to raise the water temperature for improved cleaning performance based on your cleaning needs.

Heat Indicator Light (ProHeat models only)

After turning the Built-In Heater Switch on, the Heat Indicator Light will illuminate, indicating the heater has reached the correct temperature.

Flex Hose Clip

The clip guides the storage of the vacuum flex hose around the unit.

TurboBrush Clip (select models only)

Attaches to the unit for storage of the TurboBrush.

Tough Stain Brush

The standard tool that attaches to the Vacuum Flex Hose.

Quick Release Cord Wrap

To remove the Power Cord, gently twist/rotate the Quick Release Cord Wrap clockwise.

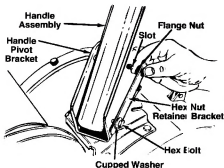


FIGURE 2.

ATTACHING THE HANDLE ASSEMBLY (Hardware B)

1. Place cupped washer onto hex bolt (crown side of washer goes against the bolt). Place hex nut retainer bracket on hex bolt, using the round hole in retainer bracket.
2. Place handle assembly in position in the handle pivot bracket. Line up the holes in handle assembly with the holes (and slots) in the pivot bracket. See figure 2.
3. Insert hex bolt (with washer and hex nut retainer attached) through the bottom holes on the handle pivot bracket and handle assembly. Head of the hex bolt should be to the left hand side of the unit, as shown in figure 2.
4. Place flange nut between hex nut retainer bracket and handle pivot bracket. See figure 2.

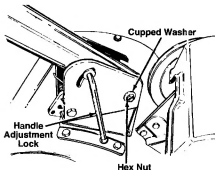


FIGURE 3.

5. Secure bottom of handle by placing cupped washer (cupped side against the pivot bracket) and hex nut on hex bolt. Do not tighten at this time. See figure 3.
6. Line up holes in handle with slots in handle pivot bracket. Insert handle adjustment lock through handle pivot bracket and handle assembly. See figure 3. Thread end of handle adjustment crank into the flange nut.
7. Pivot handle assembly into position desired. Tighten securely the bottom bolt and nut. Tighten the handle adjustment lock.

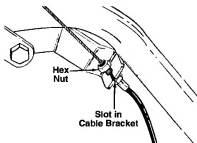


FIGURE 4.

ATTACHING THE CLUTCH CABLE (Hardware C)

Attach the clutch cable to the left handle as follows (be careful not to kink the cable).

1. Route the clutch cable to the left side of the tiller, and underneath the handle. Remove one hex nut from the end of the casing on the clutch cable. Thread the other nut all the way onto the threaded casing, as far as it will go.
2. Slip the wire through the slot on the cable bracket on the left handle. Push the end of the casing up through the cable bracket. Rethread the hex nut on the end of the cable casing. Do not tighten at this time. See figure 4.

Download Program

This menu item is used to select the channel from which to retrieve the correct time from the Teletext. When this item is selected the television set tunes to the selected program.

Time Offset

This menu item is used to set the offset needed to adjust the time received from the Teletext channel to represent the current time in the current location.

- **Brightness**
The brightness control contains 63 discrete values from the minimum to maximum setting.
- **Colour**
The colour control contains 63 discrete values from the minimum to maximum setting.
- **Contrast**
The contrast control contains 63 discrete values from the minimum to maximum setting.
- **Sharpness**
The sharpness control contains 63 discrete values from the minimum to maximum setting.
- **Forced mono (for stereo televisions only)**
This command is used to activate or deactivate the stereo feature in stereo sets. Toggle YES, NO using the right/left cursor.
- **Balance (for stereo televisions only)**
To balance the output sound from TELEVISION's speakers left and right.
- **Treble (for stereo televisions only)**
To set the treble frequencies of sound output from TELEVISION's speakers.
- **Bass (for stereo televisions only)**
To set the bass frequencies of sound output from television's speakers.
- **AVL (Automatic Volume Leveller)**
The Automatic Volume Leveller feature is shown as "AVL" in the menu and its valid states are "YES", "NO".
- **Volume Fixed**
The valid toggle states are "YES" and "NO": if YES, the volume is fixed at a certain volume, if NO, the volume contains 63 discrete values.

• **Volume Bar**

To display volume bar when adjusting volume, select "YES". Select "NO" to hide the bar.

• **Min Volume**

This item sets the limit for minimum volume allowed for the television set. Use right/left cursor to adjust.

• **Max Volume**

This item sets the limit for the maximum volume allowed for the television set. Use right/left cursor to adjust.

• **Switch on Volume**

This item sets the television's volume at switch on. Use the right/left cursor to adjust.

• **Buzzer Volume**

This item sets the volume of the alarm buzzer. Use the right/left cursor to adjust.

• **Switch On Program**

This item sets the television's program at switch on.

• **Power On**

The Power On menu function defines the behaviour of the television whenever AC Power is applied.

The valid states are "FORCED", "STANDARD" and "STANDBY".

When "FORCED", the television can only be switched OFF by means of the main switch or a set-up remote control or by ESP function (Energy Saving Programmability controls the maximum continuous viewing time allowed by the control system).

When "STANDARD", the television switches on the previous status, ON or Stand-by. When "STAND-BY", the television always switches on in Stand-by.

• **Step Tuning (YES/NO)**

If YES, TV programs (1 to 9) are tuned immediately when a digit is pressed.

If NO, tuning is performed only after the dash disappears.

• **Digit Time-out**

This is the time-out to enter the second digit for TV program 10 onwards.

IN RILASCIO

Il nuovo climatizzatore a parete, con tecnologia innovativa, è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale.

INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



IN RILASCIO

Il nuovo climatizzatore a parete, con tecnologia innovativa, è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale.

INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



IN RILASCIO

Il nuovo climatizzatore a parete, con tecnologia innovativa, è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale. Il climatizzatore a parete è stato studiato per essere installato in qualsiasi ambiente, sia esso residenziale o commerciale.

INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO




INSTALLAZIONE E FUNZIONAMENTO



INSTALLAZIONE E FUNZIONAMENTO



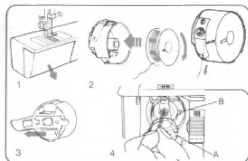


INSERTING BOBBIN AND CASE INTO MACHINE

INSERTING BOBBIN INTO CASE

Open hook cover as illustrated. (1) Insert filled bobbin into case as detailed. (2) Holding the hinged latch (3) insert bobbin and case into the hook making sure the finger "A" is located inside the section "B" (4)

Leave about 10 cm [4"] of thread from the bobbin case and always ensure that the needle is raised to its highest position when removing or inserting the bobbin.

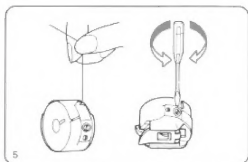

BOBBIN THREAD TENSION

Measure the bobbin thread tension by suspending the wound bobbin in its case by the end of the thread. If the bobbin does not move when it is gently swung, the tension is too tight, if it falls to the ground or moves down too freely, it is too loose.

Correct tension is obtained when it slips down a few inches (approx. 10 cm). (5)


Note: It is not normally necessary to adjust bobbin thread tension. It is usually only necessary to adjust the top thread tension when some alteration is desired. See pages 9/10.

This page intentionally left blank

*t advice
in a
this.*

*g
ars in
rk (like
at left)
i some
t. This
is that
is vital
the*

Step 7 Click **Next** to install the driver.

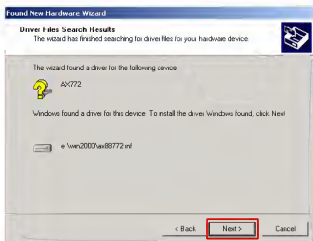

Step 8 Click **Yes** at the Digital Signature prompt.

Step 9 Click **Finish** to complete the installation.


Step 10 Connect an Ethernet cable from the USB 2.0 Ethernet Adapter to the desired Ethernet device.

Step 11 Restart your computer.

■ User guidance

For each of my cooking zones there are five symbols with control lights that show at what setting the various cooking processes can be done.

The symbols signify:

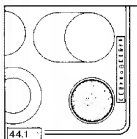

Heating up, frying at high temperature

Frying

Steaming/Boiling

Parboiling

Melting

Please also follow the table on setting the automatic cooking zones.

■ Residual heat indicator


For each of my glass-ceramic cooking zones there is a control light, on the left or the right in the glass-ceramic hob, which lights up if the cooking zone is hot. As soon as the cooking zone cools down the light goes out.

■ Escape of steam and fumes from the oven

The fumes from my oven can escape through the openings at the back of my hob. You will find more details in the section on fume outlet from the oven.

AUTOMATIC TUNING OF CHANNELS

Automatic tuning of channels allows you to store each programme automatically.

Step	Press button	Result on screen
1	MENU	
2	▼	
3	>	
4	▼	
5	>	
6	ESC	

Quick Start (cont'd)

To view current alarms, perform the following steps:

- 1 Using the operating panel's numeric keypad, enter a valid ID code to display the Action Menu 1 (see page 19) if no burglary groups are on; or press the "Turn off" selector button (if burglary groups are on) to deactivate all annunciating devices.
- 2 If any burglary groups are on, complete the steps under "Turning Off Burglary Protection" in the *SYSTEM OPERATION* section. When all burglary groups are off, press **Continue** to display Action Menu 1.
- 3 Press **See alarms** to display the alarm type, point number, and description.
- 4 Press **Prev** or **Next** to display additional alarms.
- 5 Press **Quit** to display Action Menu 1.

Entering Your Personal ID Number

The first step in performing any function within the FOCUS® 200 PLUS system is to enter your personal six-digit ID number.

To enter a valid ID code, perform the following steps:


- 1 Enter your six-digit personal ID number. You should hear a short beep after each digit is entered. After your number has been accepted, you will hear a longer beep.
- 2 Now wait about 15 seconds and try to enter another, random six-digit number. What happens now?

The number is recognized as an invalid ID code and the operating panel will display "Code Incorrect, Try Again."

- 3 If you make a mistake, press "Clear" to re-enter the number.

The operating panel is active for 10 seconds after a valid code is entered. You must enter a menu selection within that time or the operating panel will deactivate, requiring the input of a valid ID code again. Once you have selected a menu item, however, the panel remains active for a full minute before becoming inactive. This timeout feature automatically secures your FOCUS® 200 PLUS security system in the event of a distraction or emergency that causes you to step away from the operating panel.

Figure 8. Mixing of supply air and exhaust air

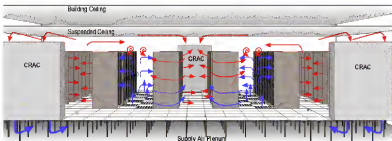

Raised floors

Raised floors typically measure 18 inches (46 cm) to 36 inches (91 cm) from the building floor to the top of the floor tiles, which are supported by a grounded grid structure. The static pressure in the supply plenum pushes the air up through perforated floor tiles to cool the racks. Most equipment draws in cold supply air from the front and exhausts warm air out the rear of the racks. Ideally, the warm exhaust air rises to the ceiling and returns along the ceiling back to the top of the CRAC units to repeat the cycle. Administrators should take into consideration that a higher supply air plenum (36 inches) will provide additional air flow for high density configurations.

Air supply plenum

The air supply plenum must be a totally enclosed space to achieve pressurization for efficient air distribution. The integrity of the subfloor perimeter (walls) is critical to prevent moisture retention and to maintain supply plenum pressure. This means that openings in the plenum perimeter and raised floor must be filled or sealed. Subfloor plenum dividers should be constructed in areas with large openings or with no subfloor perimeter walls.

The plenum is also used to route piping, conduit, and cables that bring power and network connections to the racks. In some data centers, cables are simply laid on the floor in the plenum where they can become badly tangled (Figure 9). This can result in cable dams that block airflow or cause turbulence that minimizes airflow and creates hot spots above the floor. U-shaped "basket" cable trays or cable hangers can be used to manage cable paths, prevent blockage of airflow, and provide a path for future cable additions. Another option is to use overhead cable trays to route network and data cables so that only power cables remain in the floor plenum.

DVD RATING SETUP

Parental

This item allows you to limit the content of movie playback from G to Adult. The lower the value, the more strict the control.

- 1 G
- 2 PG
- 3 PG-13
- 4 R
- 5 NC-17
- 6 Adult

The rating level can only be changed when the correct password is provided. For first time use to change parental control, using cursor ► button to enter parental mode, key in the default password (3308) and press ENTER. Press ENTER button again to select the parental level, select the level and press ENTER.

Change Password

To change the password to your own password select "Change Password" mode and enter the default password (3308) followed by pressing ENTER. Press ENTER button again and key in a new four digit password.



Note: The Default Password is 3308. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record the default password in another area and delete it from this menu. Some discs can be limited depending on the age of users while some discs cannot.

DVD Misc SETUP

Select "MISC" using ▲▼ button, then press ► button to enter the Misc menu. Select the option you want to change using ▲▼ button, then press ENTER.



- The hot air oven is extremely versatile since you can cook a complete meal in it. You can cook different foods at the same time, such as fish and cakes, without any transfer of smell or taste from one to the other.
- When menu cooking try to choose foods which require similar cooking temperatures.
- When cooking meat in uncovered containers the **fat filter** must be inserted.
When cooking pies or cakes at the same time as a roast you can choose pies or cakes which normally cook at temperatures 20 °C lower than the roast. Temperature differences of 10 °C lower than the roast can be compensated by longer or shorter cooking times.
Shelf positions are chosen according to the food being cooked and in connection with the cooking guidelines in the recipe book supplied.

Menu suggestion:

Meat Loaf
Potato Bake
Buttered Carrots
Fruity Rice Pudding

Ovenware:

Oblong ovenproof dishes

Shelf positions:

Meat Loaf & Potato Bake
Side by side 3rd from top
Carrots and Fruity Rice Pudding
Side by side 5th from top

Cooking method:

Hot Air

Temperature:


170-180 °C

Time:

Approx. 60-75 minutes


Loading Pans, Frying Pans and Large Plates

Load large and heavily soiled dishes in the lower rack.

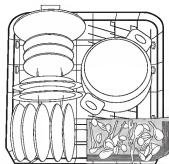


i To ease the loading of large items at some dishwasher-models the two rows of prongs for the right-hand plate insert can be folded down:

1. Slightly lift the right plate insert.

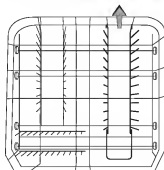

2. Fold the plate insert to the left.

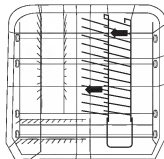

Regulations and safety notices

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CE declaration of Conformity

Hereby, Acer Inc., declares that this LCD monitor is in compliance with the essential requirements and other relevant provisions of EMC Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, and RoHS Directive 2011/65/EU and Directive 2009/125/EC with regard to establishing a framework for the setting of ecodesign requirements for energy-related product.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with EMC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user authority, which is granted by the Federal Communications Commission, to operate this product.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Disposal of Waste Equipment by Users in Private Household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Abbreviation	Meaning
RW	Read/Write Bits and fields can be read and written.
RW, <i>n</i>	Read/Write, and takes the value <i>n</i> at power-on reset. Bits and fields can be read and written.
W1C	Write One to Clear If read operations are allowed to the register, then the value may be read by software. If it is a write-only register, then a read operation by software returns an UNPREDICTABLE result. Software write operations of a 1 cause the bit to be cleared by hardware. Software write operations of a 0 do not modify the state of the bit.
W1S	Write One to Set If read operations are allowed to the register, then the value may be read by software. If it is a write-only register, then a read operation by software returns an UNPREDICTABLE result. Software write operations of a 1 cause the bit to be set by hardware. Software write operations of a 0 do not modify the state of the bit.
WO	Write Only Bits and fields can be written but not read.
WO, <i>n</i>	Write Only, and takes the value <i>n</i> at power-on reset. Bits and fields can be written but not read.

- Sign extension

SEXT(*x*) means *x* is sign-extended to the required size.

Addresses

Unless otherwise noted, all addresses and offsets are hexadecimal.

Aligned and Unaligned

The terms *aligned* and *naturally aligned* are interchangeable and refer to data objects that are powers of two in size. An aligned datum of size 2^n is stored in memory at a byte address that is a multiple of 2^n ; that is, one that has *n* low-order zeros. For example, an aligned 64-byte stack frame has a memory address that is a multiple of 64.

A datum of size 2^n is *unaligned* if it is stored in a byte address that is not a multiple of 2^n .

Bit Notation

Multiple-bit fields can include contiguous and noncontiguous bits contained in square brackets ([]). Multiple contiguous bits are indicated by a pair of numbers separated by a colon [:]. For example, [9:7,5,2:0] specifies bits 9,8,7,5,2,1, and 0. Similarly, single bits are frequently indicated with square brackets. For example, [27] specifies bit 27. See also Field Notation.

Caution

Cautions indicate potential damage to equipment or loss of data.

tings (from SET1 to SET8). The number of the settings is different for different models. Look into the table below to see the possible value of each setting.

Settings menu

Indicator of the setting menu	Description	Value to set
SET1	SET+GO	ON/OFF
SET2	RESIDUAL HEAT INDICATOR	ON/OFF
SET3	CLEANING REMINDER	ON/OFF
SET4	KEY TONE	CLIC/BEEP/OFF
SET5	FAULTY TONE	ON/OFF
SET6	SERVICE MENU	---
SET7	RESTORE SETTINGS	YES/NO
SET8 ¹⁾	TIME EXTENSION	ON/OFF

1) Selected models only



You can set the settings menu only when the appliance is off.

Activate the Settings menu:

1. If necessary, deactivate the appliance ①.
2. Touch and hold for three seconds.
The display shows "SET1" and "1" flashes.
3. Touch / to set the setting.
4. Touch **OK**.
5. Touch / to change the value of the setting.
6. Touch **OK**.

Automatic switch-off

The appliance deactivates after some time:

- if you do not deactivate the appliance;
- if you do not change the oven temperature.

Oven temperature	Switch-off time
30°C - 115°C	12,5 h
120°C - 195°C	8,5 h
200°C - 245°C	5,5 h
250°C	3,0 h

To operate the appliance after an automatic switch-off, first deactivate the appliance fully.

Brightness of the display

There are two modes of display's brightness:

- Night brightness - when the appliance is off, the brightness of the display is lower between 22:00 and 06:00.

ShowView Programming

ShowView greatly simplifies entering the date, channel, start and end times of a Timer Recording by simply entering a ShowView Code. ShowView Codes are published in most TV guide magazines; they can vary one to nine numbers in length.

ShowView is a registered trademark of Gemstar Development Corporation.

The ShowView system is manufactured under licence from Gemstar Development Corporation.

- 1 Make sure that TV channels have been tuned and stored in correct SHOWVIEW order. Insert a video cassette with protection tab into your VCR.

- 2 Press **SHOWVIEW**.



- 3 Press $\blacktriangle$ or $\blacktriangledown$ to select the recording type.
ONCE: To record once.
WEEKLY: To record at the same time every week.
DAILY: To record every day (except Saturday and Sunday) at the same time.

- 4 Press the **numbered buttons** to enter the **ShowView Code** of the TV programme that you wish to record.
 If you make a mistake press $\blacktriangleleft$ then enter the revised number.



- 5 Press **OK/ENTER**.
 If **PLEASE CHECK** is displayed it means that you have entered the wrong ShowView number, entered the ShowView number incorrectly.
 If $\% \cdot$ is displayed, you have to enter the programme number of the station, you want to record from.



- 6 Press $\blacktriangleleft$ or $\blacktriangleright$ to select the settings that you wish to revise. (PR, DATE, TIME, VPS and SP).
 Press $\blacktriangle$ or $\blacktriangledown$ to enter the correct information.



- 7 Press $\blacktriangle$ or $\blacktriangledown$ to switch VPS/PDC on or off.
 Press $\blacktriangleright$ to select the recording speed.
 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired tape speed (SP, LP, or PP).
 IP mode determines how much tape is left and switches speed from SP to LP, if necessary, to complete recording the program.
 IP mode is not selected when VPS/PDC is ON.
 Check that the timer event details are correct.
 If you wish to record from AV 3 IN AUDIO and VIDEO on the front or from either of the EURO SCART sockets on the back of VCR, press AV to select for correct display (AV1, AV2 or AV3).



- 8 If you want to make another ShowView recording repeat stages 2 - 7.
 Press **1/SETUP** twice.
 If **PLEASE CHECK** is displayed, you have entered incorrect information and will need to re-enter the data.
 Press **POWER** to switch your VCR power off mode.
 TIMER will appear in the video recorder's display while your VCR waits to make the recording.

Notes

- **Video Programme System (VPS)**
 The Video Programme System (VPS) ensures that the TV programmes that you have programmed for timer recording will be recorded exactly from their beginning to end, even if the actual broadcasting time differs from the scheduled time due to delayed start, or if the programme is extended beyond its scheduled time. Also, if a programme is interrupted, for example, if a news flash is inserted, the recording will also be interrupted automatically and resumed when the programme continues.
 The VPS signal is broadcast by the TV station and this controls the timer in the video recorder.
 VPS should be set ON for all timer recordings from TV stations broadcasting these signals. It should be set OFF for all timer recordings from TV stations that are not broadcasting these signals.
 *** The similar system DPC, which is used in the time being in the Netherlands, can also be used with your new video recorder.
- If you want to watch a DVD during timer recording, press TV/VCR on the remote control to select VCR mode.

Write SN/SNID

1. Check Serial Number feature items , double click Serial Number "Value" field , enter new SN , then click "Write" button. [Figure 9]



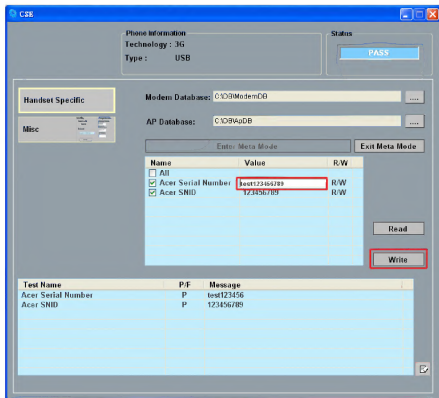


Figure 9. Check Serial Number and double click "Value" field.

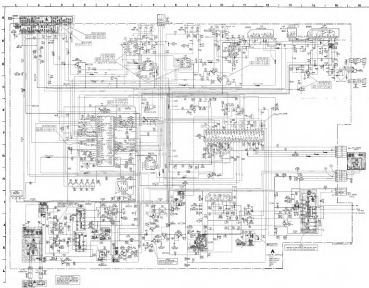

Wiring Diagram

Wire Color	Wire Size	Wire Length	Wire Location	Wire Notes
Red	16	1.0m	Engine Compartment	Power to ECU
Blue	16	1.0m	Engine Compartment	Ground to ECU
Yellow	16	1.0m	Engine Compartment	Power to Throttle Body
Green	16	1.0m	Engine Compartment	Ground to Throttle Body
Black	16	1.0m	Engine Compartment	Ground to Fuel Injectors
White	16	1.0m	Engine Compartment	Power to Fuel Injectors
Grey	16	1.0m	Engine Compartment	Ground to Transmission
Brown	16	1.0m	Engine Compartment	Power to Transmission
Pink	16	1.0m	Engine Compartment	Ground to Power Windows
Orange	16	1.0m	Engine Compartment	Power to Power Windows
Light Blue	16	1.0m	Engine Compartment	Ground to Door Locks
Light Green	16	1.0m	Engine Compartment	Power to Door Locks
Light Yellow	16	1.0m	Engine Compartment	Ground to Convenience Features
Light Grey	16	1.0m	Engine Compartment	Power to Convenience Features





SMART PICTURE CONTROL

Whether you are watching a movie or video game, your TV has automatic video control settings matched to your current program source or content. The Smart Picture feature quickly resets your TV's video controls of program for a number of different types of programs and viewing conditions you may have in your home. Each Smart Picture setting is preset at the factory to automatically adjust the TV's Brightness, Colour, Picture and Sharpness levels.

Step

Press button



Press button repeatedly to cycle through the 5 settings namely, **Personal**, **DVD/VCD**, **Rich**, **Natural** and **Soft** and select your desired picture setting.



Exit menu from screen.

Definition of Picture Settings

- Personal** : Picture settings are set to your preference.
- DVD/VCD** : For optimal picture setting, whenever the source is connected to DVD/VCD player, select DVD/VCD setting for AV mode.
- Rich** : Emphasize very vibrant colours. This setting is the optimal setting when you are viewing TV programmes in a brightly-lit room.
- Natural** : Emphasize original colours.
- Soft** : Emphasize "warm" colours. (Suitable for dimly-lit room condition and gives cinema-like effect when light is switched off).

PERSONAL

DVD/VCD

RICH

NATURAL

SOFT